


EXAMPLE ON DOOR SWITCH NO/NC

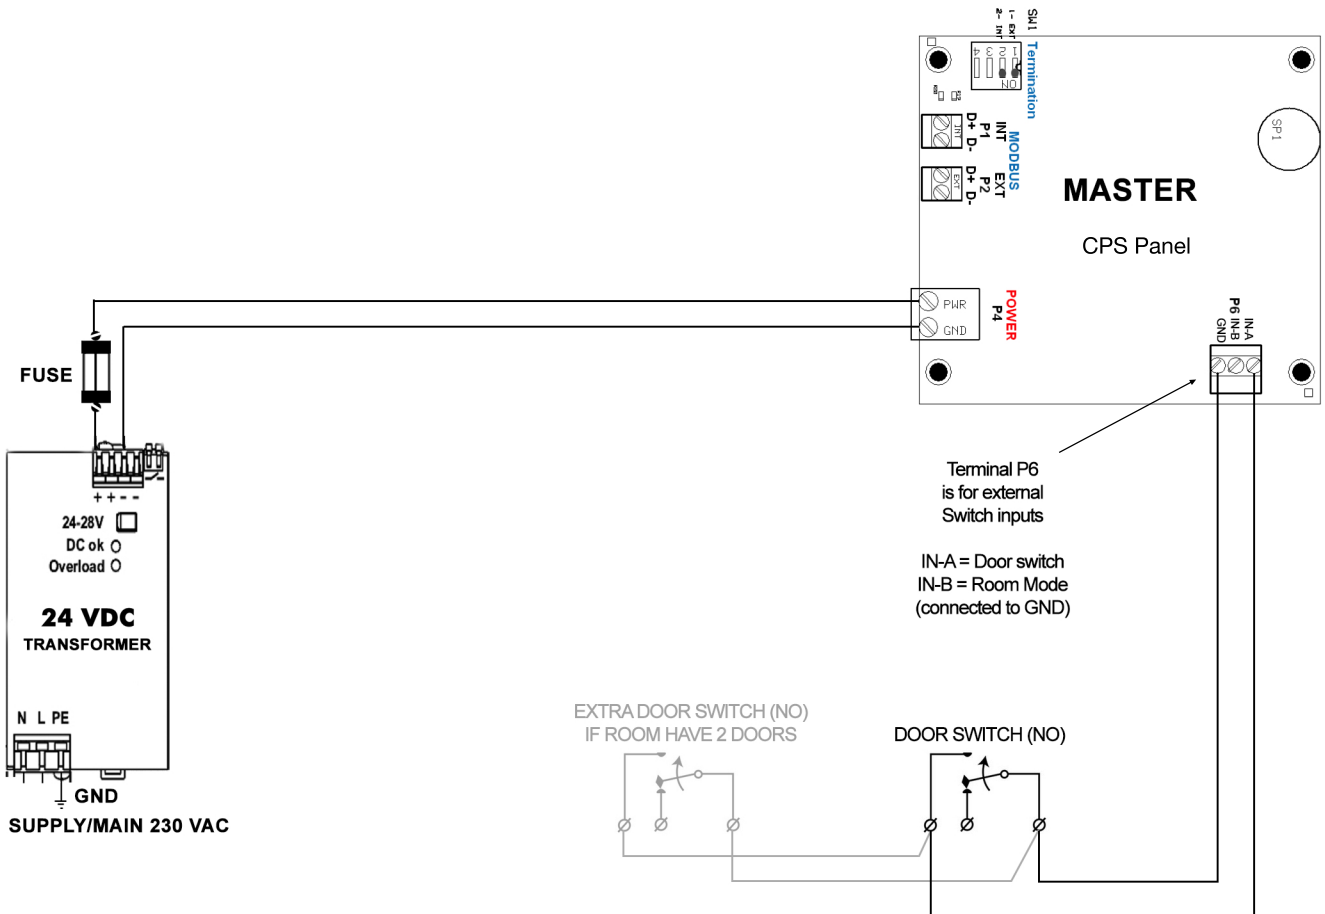

PSIDAC
Care is in the Air

By. Roger Sundberg

Rev. 1.0

Date 13/10-2020

Project CPS 6021
System CPS Master with Door-switches

Wiring Example: Door switches to a CPS-system